


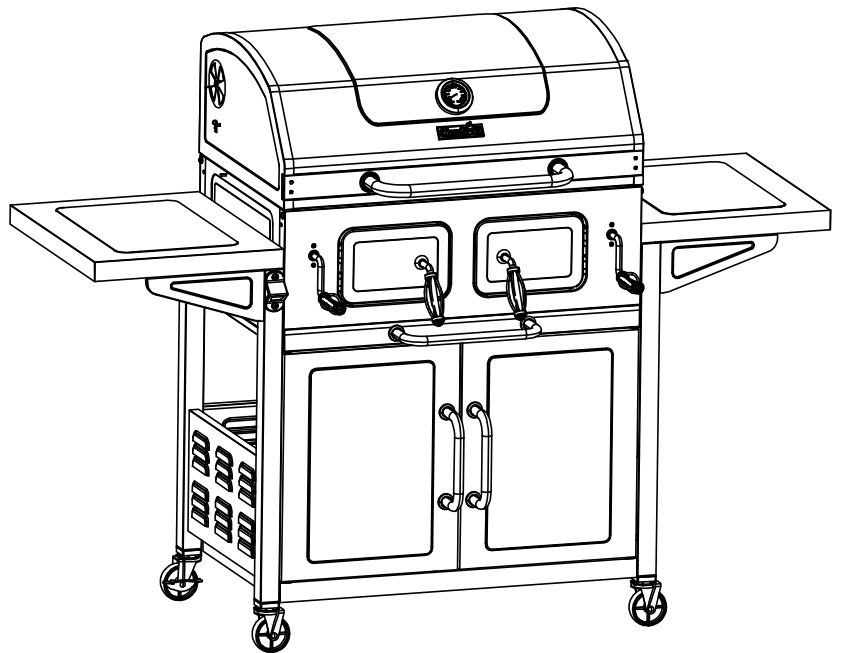

# Charcoal Grill 800 Deluxe

**Product Guide  
Model 13301857**

**Tools needed for assembly:**  
Phillips Screwdriver  
Adjustable Wrench



**IMPORTANT:** Fill out the product record information below.  
Date Purchased \_\_\_\_\_

## FOR OUTDOOR USE ONLY

	WARNING	
<p><b>CARBON MONOXIDE HAZARD</b> Burning charcoal inside can kill you. It gives off carbon monoxide, which has no odor. NEVER burn charcoal inside homes, vehicles, or tents.</p>		

	CAUTION	
<p>Read and follow all safety statements, assembly instructions, and use and care directions before attempting to assemble and cook.</p>		

	WARNING	
<p>Failure to follow all manufacturer's instructions could result in serious personal injury and/or property damage.</p>		

	CAUTION	
<p>Some parts may contain sharp edges! Wear protective gloves if necessary.</p>		

### **INSTALLER/ASSEMBLER:**

Leave this manual with consumer.

### **CONSUMER:**

Keep this manual for future reference.

	CAUTION	
<p><b>THIS UNIT IS HEAVY!</b> DO NOT attempt to assemble without a helper.</p>		

If you have questions or need assistance during assembly, please call Char-Broil at 1-800-241-7548. To insure your satisfaction and for follow-up service, register your appliance online at [www.charbroil.com/register](http://www.charbroil.com/register)

## PARTS LIST

Key	Qty	Description
A	1	LID ASSEMBLY
B	2	LID BUMPER
C	1	DECOR STRIP, F/ LID
D	2	KIT, BUTTERFLY DAMPER F/ LID
E	1	TEMPERATURE GAUGE
F	1	LOGO PLATE KIT
G	2	UPPER HINGE, F/ LID
H	1	HANDLE, F/ TOP LID
I	2	BEZEL, F/ TOP LID HANDLE
J	1	SWINGAWAY GRATE
K	3	COOKING GRATE
L	1	FIREBOX, FRONT PANEL
M	2	CHARCOAL DOOR
N	2	FIREBOX, END PANEL
O	1	FIREBOX, REAR PANEL
P	2	LOWER HINGE, F/ LID
Q	2	BUTTERFLY DAMPER F/ FIREBOX
R	1	ASH DRAWER
S	1	DECOR STRIP, F/ ASH DRAWER
T	1	HANDLE, F/ ASH DRAWER
U	6	BEZEL, F/ HANDLE
V	2	CHARCOAL PAN
W	1	PIVOT SHAFT, LEFT SIDE
X	1	CHARCOAL PAN ADJUSTMENT, LEFT W/ CRANK
Y	1	PIVOT SHAFT, RIGHT SIDE
Z	1	CHARCOAL PAN ADJUSTMENT, RIGHT

Key	Qty	Description
AA	1	CHARCOAL PAN ADJUSTMENT, LEFT
BB	1	CHARCOAL PAN ADJUSTMENT, RIGHT W/ CRANK
CC	2	HANDLE, F/ CHARCOAL DOOR
DD	2	BEZEL, F/ CHARCOAL DOOR HANDLE
EE	2	CHARCOAL DOOR LATCH
FF	2	CRANK HANDLE
GG	2	CRANKSHAFT BUSHING
HH	2	SIDE SHELF
II	2	SUPPORT BRACKET, SIDE SHELF, LF/RB
JJ	2	SUPPORT BRACKET, SIDE SHELF, RF/LB
KK	1	LEFT FRONT LEG LF
LL	1	BOTTLE OPENER
MM	1	LEFT REAR LEG LR
NN	2	SIDE CART PANEL
OO	1	RIGHT FRONT LEG RF
PP	1	RIGHT REAR LEG RR
QQ	1	BOTTOM SHELF
RR	1	REAR CART PANEL
SS	1	UPPER DOOR BRACE
TT	2	DOOR
UU	2	DOOR PIN, SPRING
VV	2	HANDLE, F/ CART DOOR
WW	4	CASTER SOCKET
XX	2	CASTER, LOCKING
YY	2	CASTER, FIXED

### NOT Pictured

...	4	MAGNET
...	1	CASTER PIN
...	1	HARDWARE PACK
...	1	ASSEMBLY INSTRUCTION, ENGLISH
...	1	ASSEMBLY INSTRUCTION, SPANISH

**NOTE:** Some grill parts shown in the assembly steps may differ slightly in appearance from those on your particular grill model. However, the method of assembly remains the same.

# PARTS DIAGRAM

