

1 Items to Assemble
1 Long Leg Assembly
1 Short Leg Assembly
8 Screws

CAUTION: Ends of screws have sharp points

A Place bottom shelf on table or grill container.
B Insert tabs on long leg assembly into slots in table.
C Attach long assembly with one screw on each side.
D Repeat step B and C for short leg assembly.

Short leg right side
Long leg left side
Un-ends of bottom shelf
Long leg assembled
Correctly assembled legs

Qty: 8

2 Items to Assemble
2 Leg Extenders
1 U-Nut
1 Cylinder Thumbscrew
2 Wheels
1 Axle Rod
2 Fasteners
1 Hitch Pin

Attach leg extenders. Check to make sure leg is seated at the key into the leg extender.
Match U-nut to tab. See engagement of U-nut for correct position.
Thread cylinder thumbscrew into hole and U-nut. Screw flanged hex nut onto end of cylinder thumbscrew.
Slide wheel on axle rod. Insert axle rodwise into large hole in bottom seat. Attach other wheel with two washers and a hitch pin.

Qty: 1
Not to scale

Qty: 1
Not to scale

Qty: 1
Not to scale

Turn cart upside down
Use the one short U-nut first.
Stand cart upright and remove cardboard sleeves

Correct position of flanged hex nut
Correct position
Hub on wheel fits into grill bottom

3 Items to Assemble
4 Rails (all identical)
10 Screws

A Overlap rails and hook tabs into slots. Pull rails to latch.
B Match one screw in center of each rail.
C Attach rail and legs with two screws in each corner.

Qty: 10

4 Items to Assemble
1 Front Panel
1 Side Panel
2 Push Pins

A Place tabs on front panel beside leg tabs.
B Insert push pins into front panel and legs.

Qty: 2

5 Items to Assemble
1 Front Panel
1 Side Panel
1 Screw

Right side of cart

Qty: 1

6 Items to Assemble
1 Condition Basket
1 Push Pin

Qty: 1

Parts List - Model 463461007

Key	Qty.	Description	Part #	Key	Qty.	Description	Part #
A	1	Bottom Shelf	7000506	AA	1	Sticbumer Body	7000563
B	4	Rails	7000285	BB	1	Sticbumer Handle	7000069
C	1	Logo Plate	4157147	CC	2	Washer Head Hex Nuts	7000271
D	1	Top Casting	7000657	DD	1	Shelf	7000268
E	1	Bottom Casting	7000659	EE	1	Sticbumer Grate	4156376
F	3	Burners	7000083	FF	1	Front Panel	7000518
G	1	Carryover Tube	7000279	GG	1	Warming Rack	7000181
H	2	Pat Nuts	7000132	HH	1	Cook Grid, 8x15	7000027
I	2	U' Nuts	7001639	II	2	Cook Grids, 12x15	7000028
J	2	Casting Bumpers	7000184	JJ	1	Thumbscrew	7000355
K	1	Handle Assembly	7001760	KK	1	Velvet Hesse Regulator	7000393
L	1	Fascia, Left	7001021	LL	1	Control Panel	7000965
M	1	Condition Basket	7000370	MM	1	Ignition Module	7000944
N	2	Wheels	7000262	NN	1	24" Igniter Wire	7000894
O	1	Axle Rod	7001149	OO	1	Leg Assembly, Long	7000522
P	3	Vaporizer Tents	7000391	PP	1	Leg Assembly, Short	7000523
Q	1	Heat Shield	7000388	QQ	1	Match Holder w/Chain	7000364
R	1	Grease Tray Assy	7000043	RR	1	U' Nut	7001640
S	1	Grease Pan	7000046	..	1	Hardware Bag	7001660
T	1	Sticbumer Burner	7000036				
U	2	Leg Extenders	7000230				
V	4	Control Knobs	7000237				
W	1	Electrode	7000378				
X	1	Ignition Button	7000161				
Y	1	Temperature Gauge	7000361				
Z	1	Temperature Gauge Bezel	4157169				

ASSEMBLY MANUAL
THIS GRILL IS FOR OUTDOOR USE ONLY

CAUTION: Read and follow all safety statements, assembly instructions and use and care directions before attempting to assemble and cook.

INSTALLER/ASSEMBLER: Leave these instructions with consumer.

CONSUMER: Keep this manual for future reference.

WARNING: Failure to follow all manufacturer's instructions could result in serious personal injury and/or property damage.

CAUTION: Some parts may contain sharp edges - especially as noted in the manual. Wear protective gloves if necessary. If you have any questions or need assistance during assembly, please call 1-800-21-7545.

Visit us on the web at www.char-broil.com

Char-Broil
KEEPERS OF THE FLAME
PERFORMANCE SERIES™