

Parts List - Model 463811903

Parts List - Model 463811903							
<u>Ke</u> y	/ Qty	. Description	Part #	Key	Qty.	Description	Part#
Α	1	Lower SwingAway	. 4152125	W	1	Grease Clip	. 5156607
В	1	Cooking Grate	. 4152741	Χ	1	LP Gas Tank	. 4158015
С	1	Condiment Basket	. 4154269		1	Hardware Bag, Cart	. 4254047
D	1	Handle	. 4154488		2	Hardware Bag, Shelves	. 4254050
Ε	2	Side Shelf	. 4154543	Rep	lacen	nent Ignition Module Bag	. 4506709
F	2	Wheel Assembly	. 4310002				
G	1	Upper SwingAway	. 4156449				
Н	1	Back Support Brace	. 4500250				
I	1	V Bar	. 4500291				
J	1	Tank Support Bracket	. 4502093				
K	2	Leg Assembly	. 4502097				
L	1	Front Panel	. 4502232				
M	1	Side Support Brace	. 4502373				
N	4	#10x1/2", T-20, Self-Tap Screw	. 4080043				
0	2	Valve Clip	. 4156172				
Р	1	Burner/Collector Assembly	. 4505085				
Q	1	Control Panel Assembly	. 4530116				
R	2	Control Knob	. 4154470				
S	1	Grill Bottom	. 4580468				
Τ	1	Grill Lid	. 4581964				
U	1	Tank Retainer Wire		-		I Assembly Hardware e some customers prefer to use tools. Option	nal hex
V	1	Logo Plate	. 4157147			e been provided for you to use.	

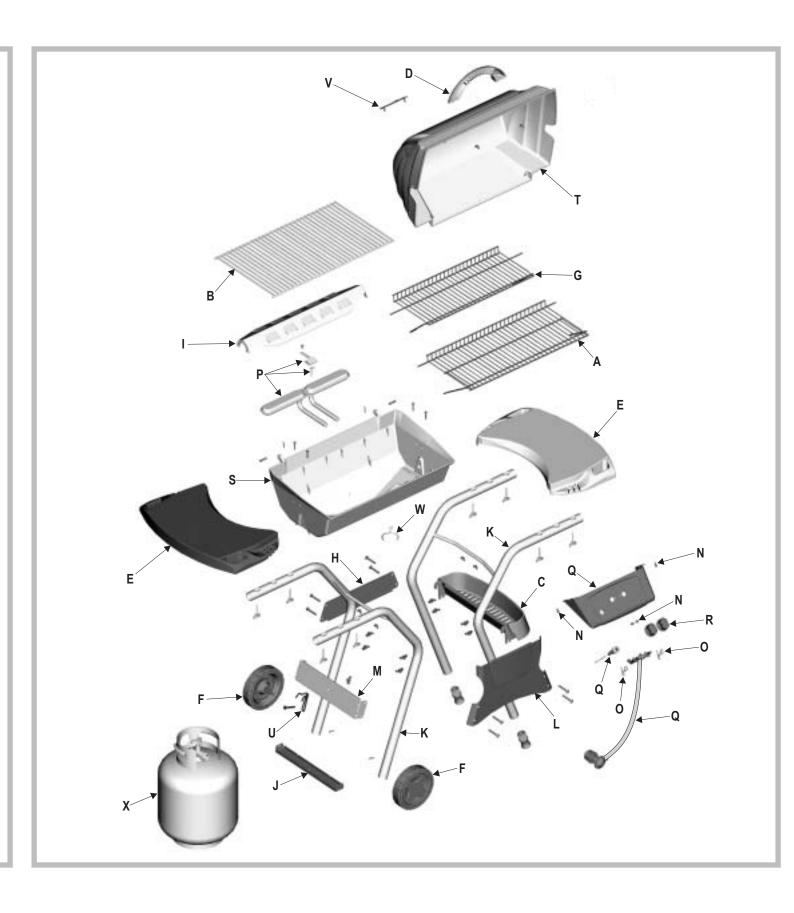



463811903 / 0-4165207 (11-25-02)

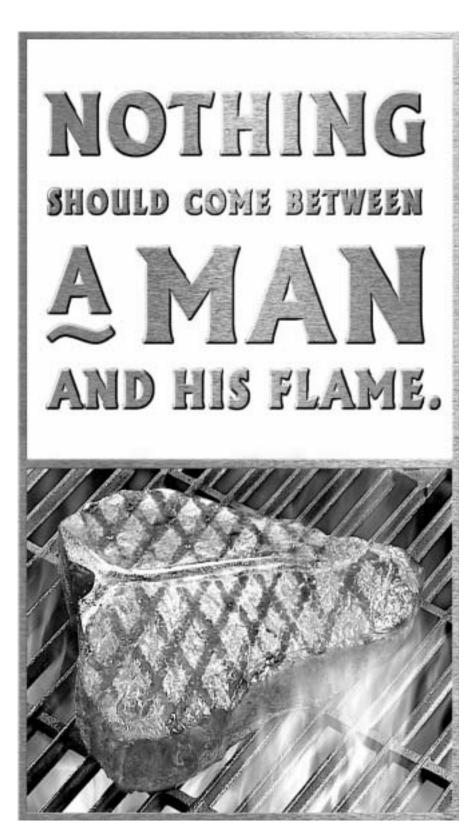



THIS GRILL IS FOR OUTDOOR USE ONLY

CAUTION: Read and follow all safety statements, assembly instructions, and use and care directions before attempting to assemble and cook.

INSTALLER/ASSEMBLER: Leave these instructions with consumer.

CONSUMER: Keep this manual for future reference.

WARNING

Failure to follow all manufacturer's instructions could result in serious personal injury and/or property damage.

A CAUTION

Some parts may contain sharp edges – especially as noted in the manual! Wear protective gloves if necessary.

If you have any questions or need assistance during assembly, please call **1-800-241-7548**.

Visit us on the web at: www.charbroil.com



